

IRB NOP

1. check inflation of boat and trailer wheels.
2. check IRB contents Knife ,torpedo tube fuel and general structure.
3. start engine in water butt before going to sea.
4. one qualified IRB trainer always with the boat when training new crew.
5. wash boat down in fresh water and run engine in fresh water after use.
6. record any malfunctions of boat or engine.